



©2017 WWW.SHANTY-2-CHIC.COM



PUB MIRROR


SUPPLY LIST

Item	Quantity	Description
1x3x8	4	Pine or Common Boards
1x4x8	1	Pine or Common Boards
24"x96"x3/4"	1	Birch
1 1/4" Brad Nails		
Wood Glue		
Hot Glue		
Hinges	8	Link in Post
Mirrors	3	Link in Post

Remember!

Many of these cuts are best made as you go. If you have questions, check out the tutorial on our site!


CUT LIST

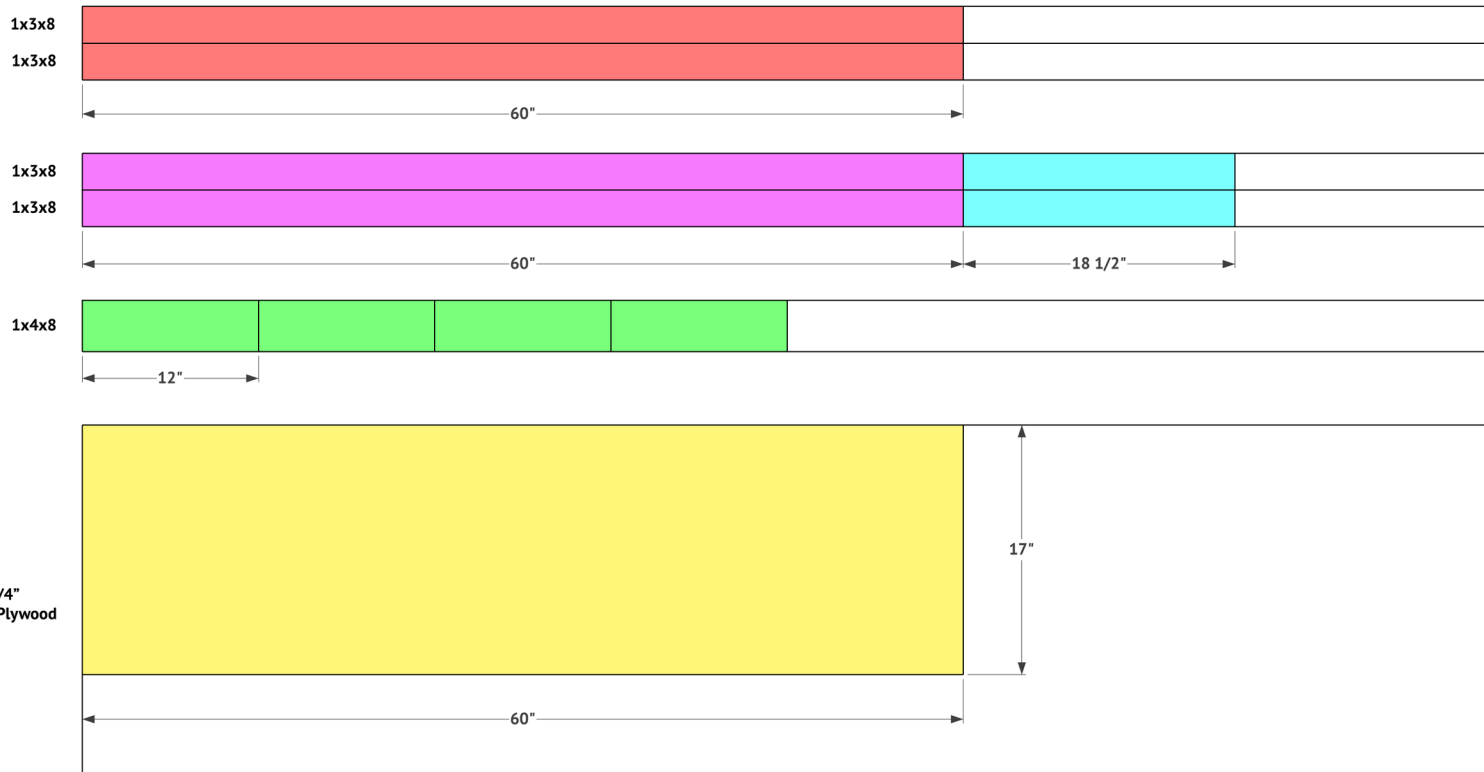


Note: Before cutting the hardwood plywood to size, lay the mirrors and wood down on the plywood to make sure it is a perfect fit.



Cut the 3/4" hardwood plywood to size (if you don't have a table saw, you can have this ripped for you at the hardware store).

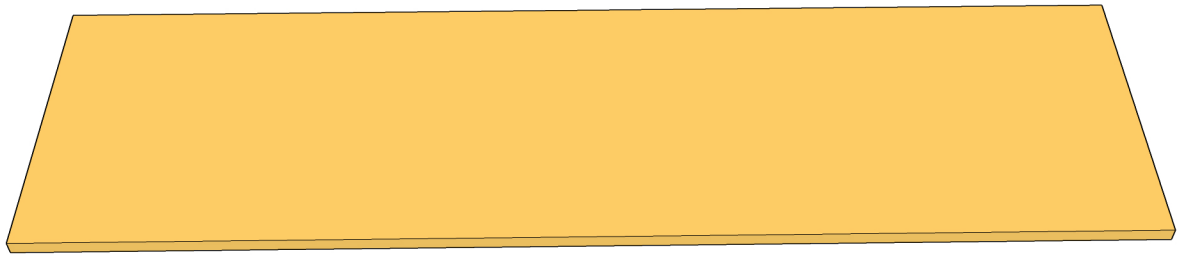


Cut the long frame pieces to size and attach them to the front of the hardwood plywood piece with 1 1/4" brad nails and wood glue. The edges of the frame pieces should be flush with the edges of the hardwood plywood.

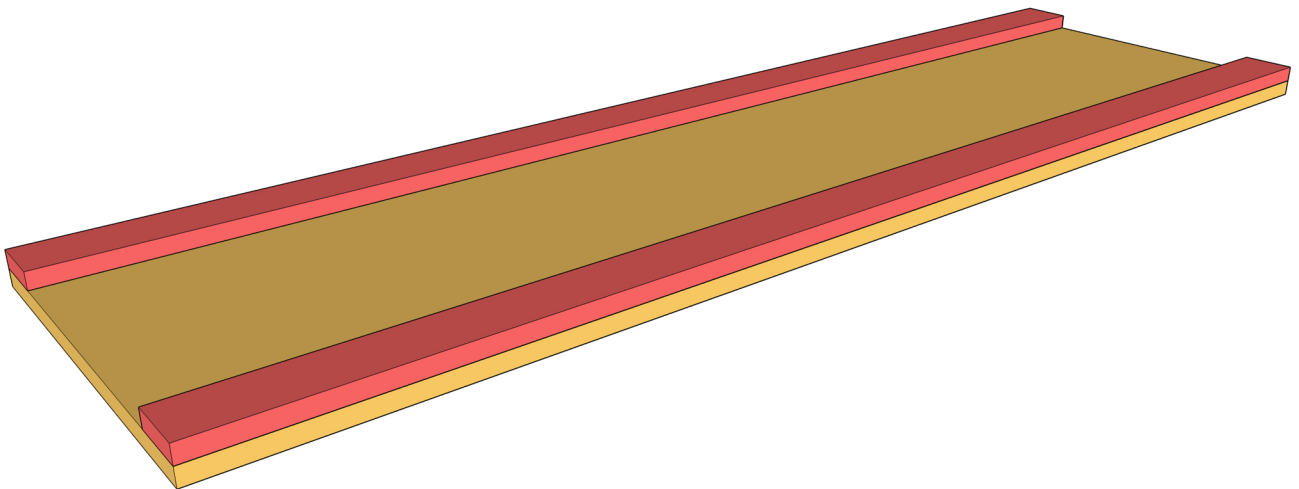

3


Cut the short frame pieces to size and attach them to the hardwood plywood. Attach the end pieces first and then attach the middle pieces. Use 1 1/4" brad nails and wood glue.

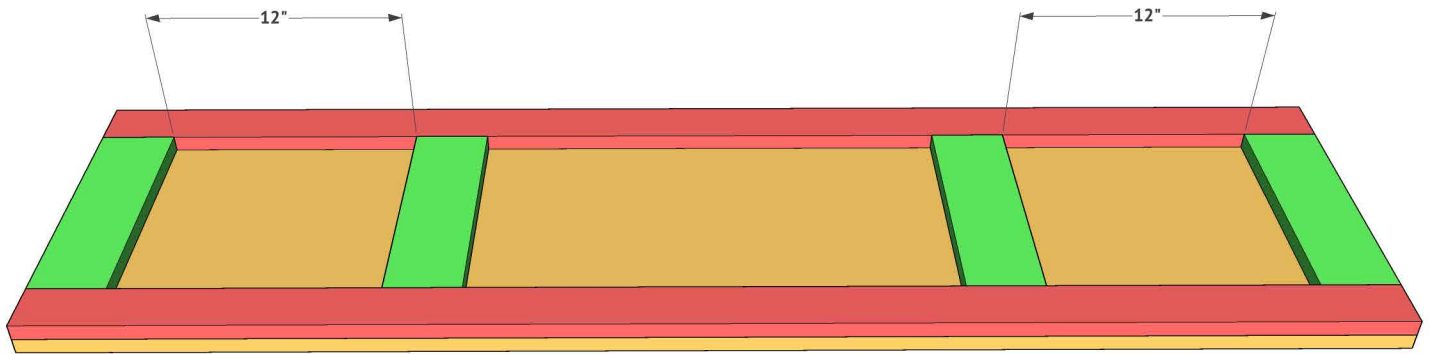



4

Cut the side trim pieces to size and attach them to the side of the frame with 1 1/4" brad nails and wood glue. The back of the trim pieces should be flush with the back of the frame.

flush

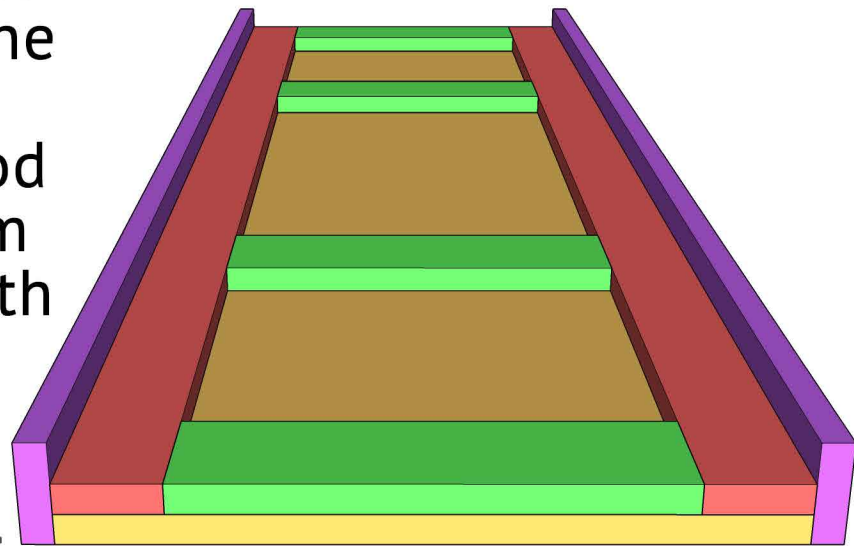

Cut the top and bottom trim pieces to size and attach them to the top and bottom of the frame with 1 1/4" brad nails and wood glue. The top and bottom trim pieces should be flush with the side trim pieces.

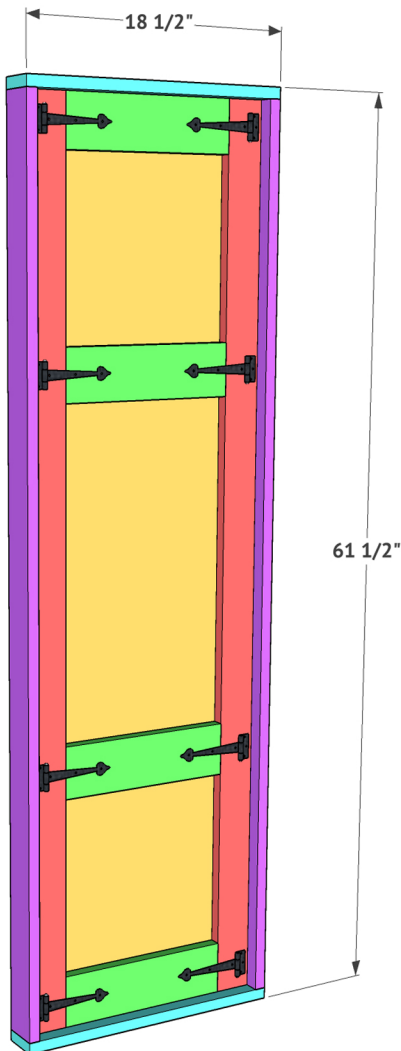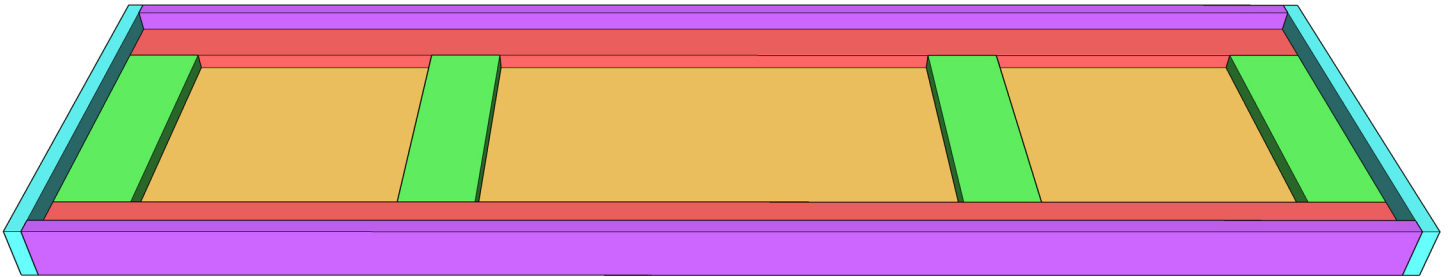

Fill your nail holes and add a finish! Once the finish is dry, attach the hinges to the frame and attach the mirrors with hot glue. You can get creative with the hardware on this and make it your own! Make sure to share your builds with us on social media and use #shanty2chic so we can share them too!

Happy Building!