



DIY MODERN DECK CHAIR

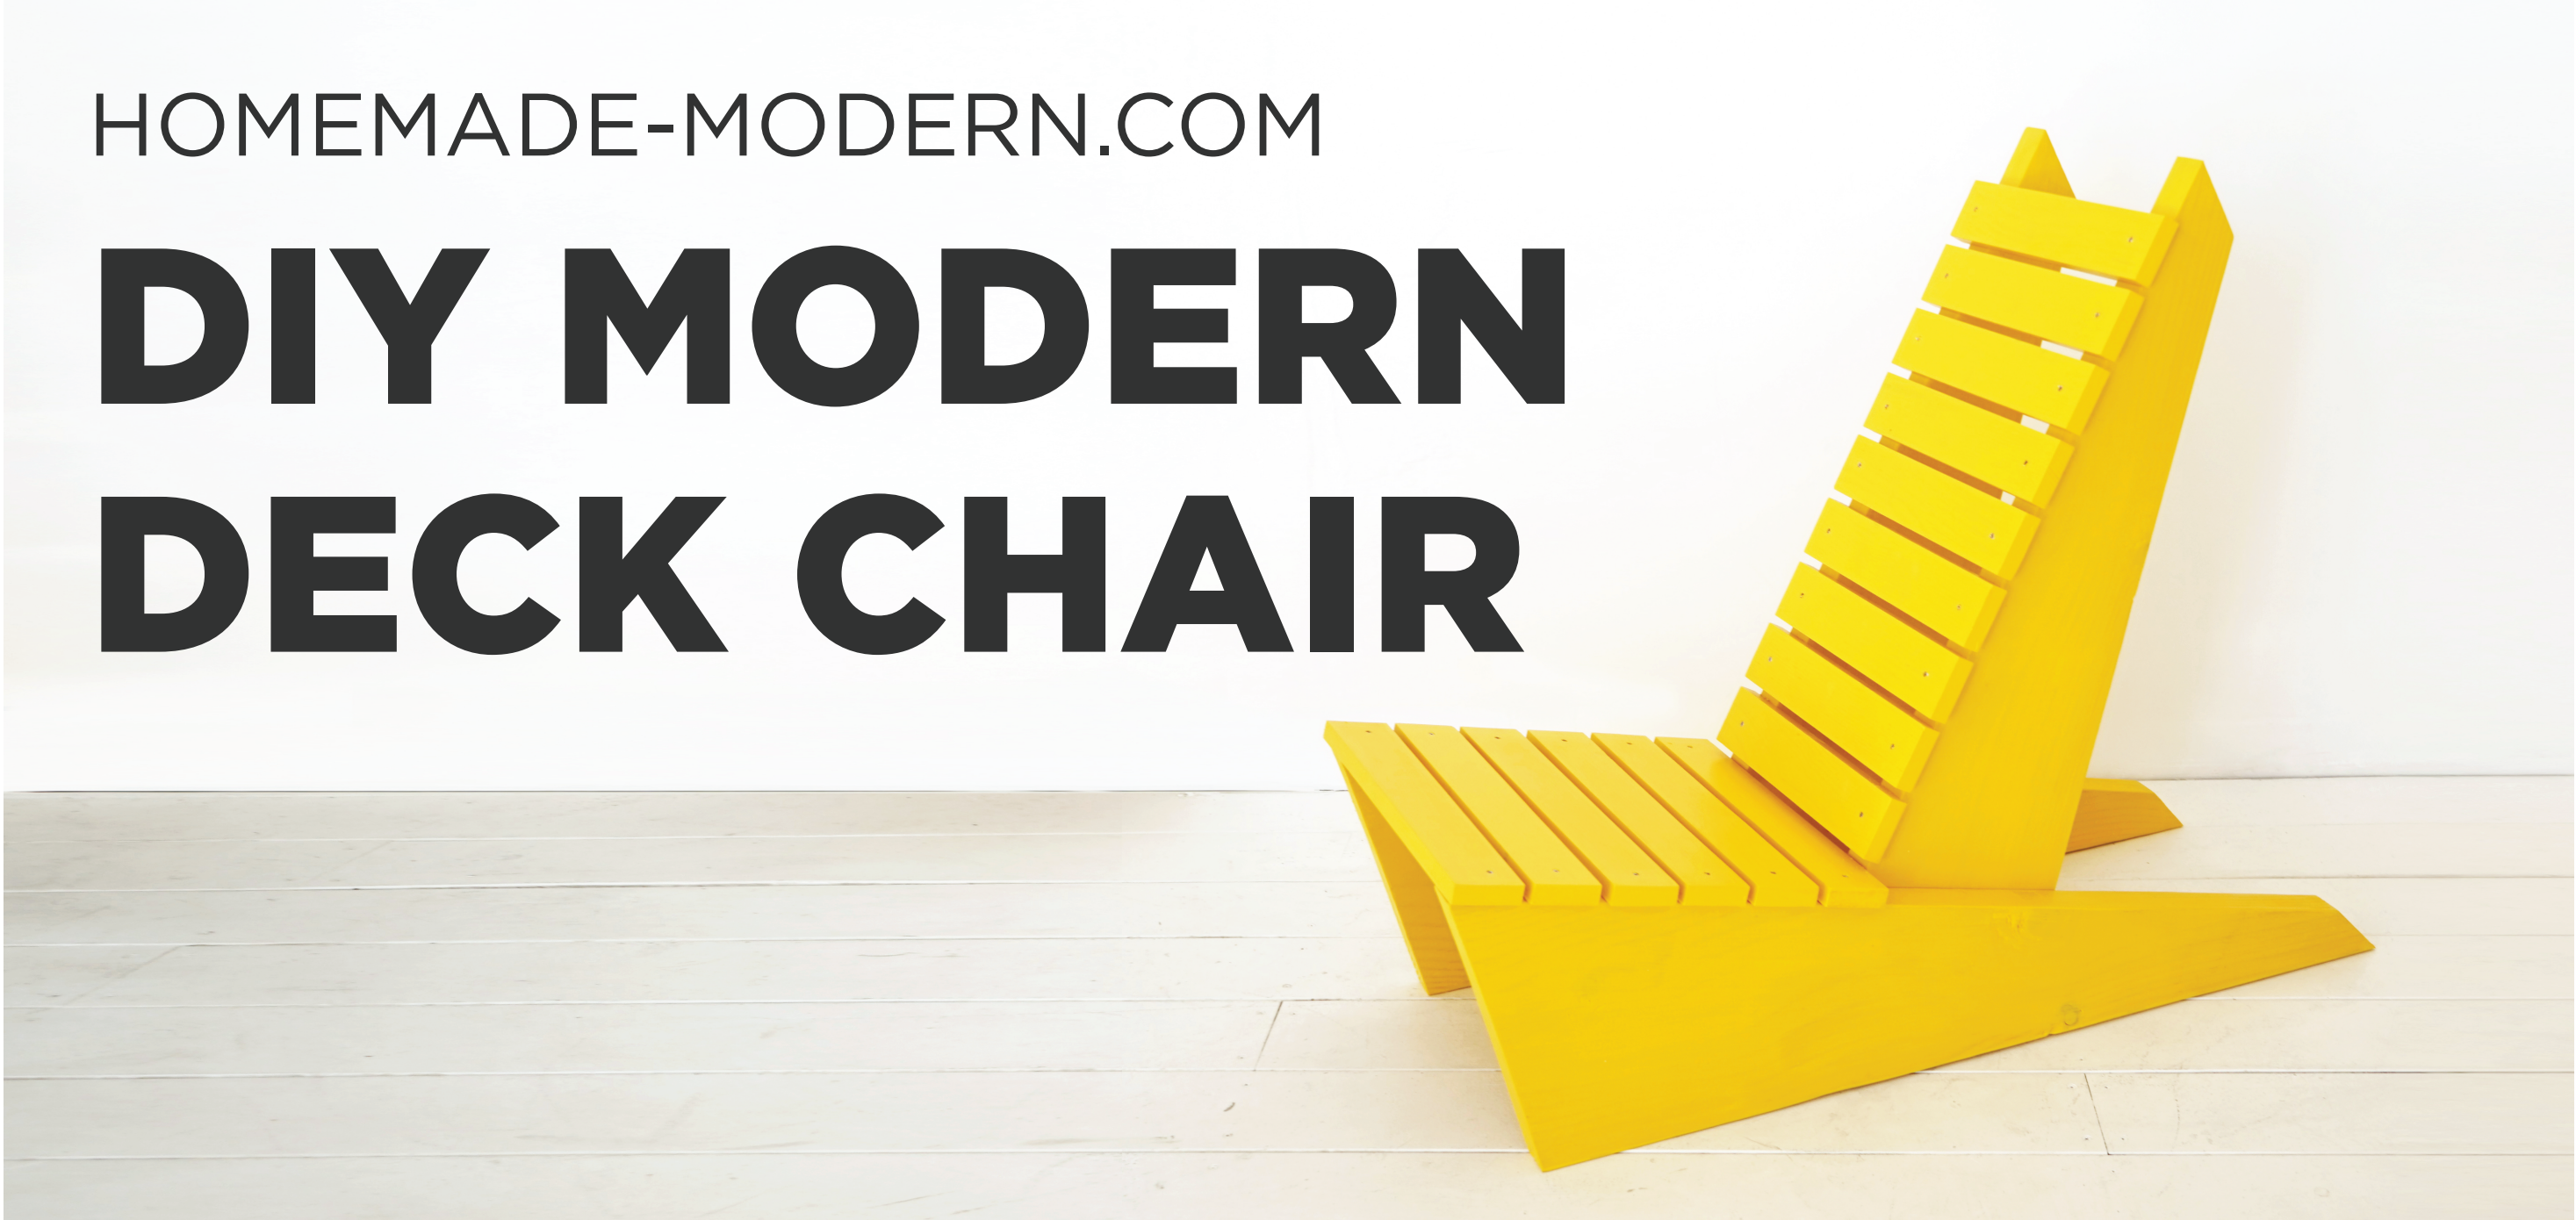


1. Cut 2x12s to length

I cut two pieces of a 2x12 48 inches long. This can be done with a circular saw or compound miter saw.

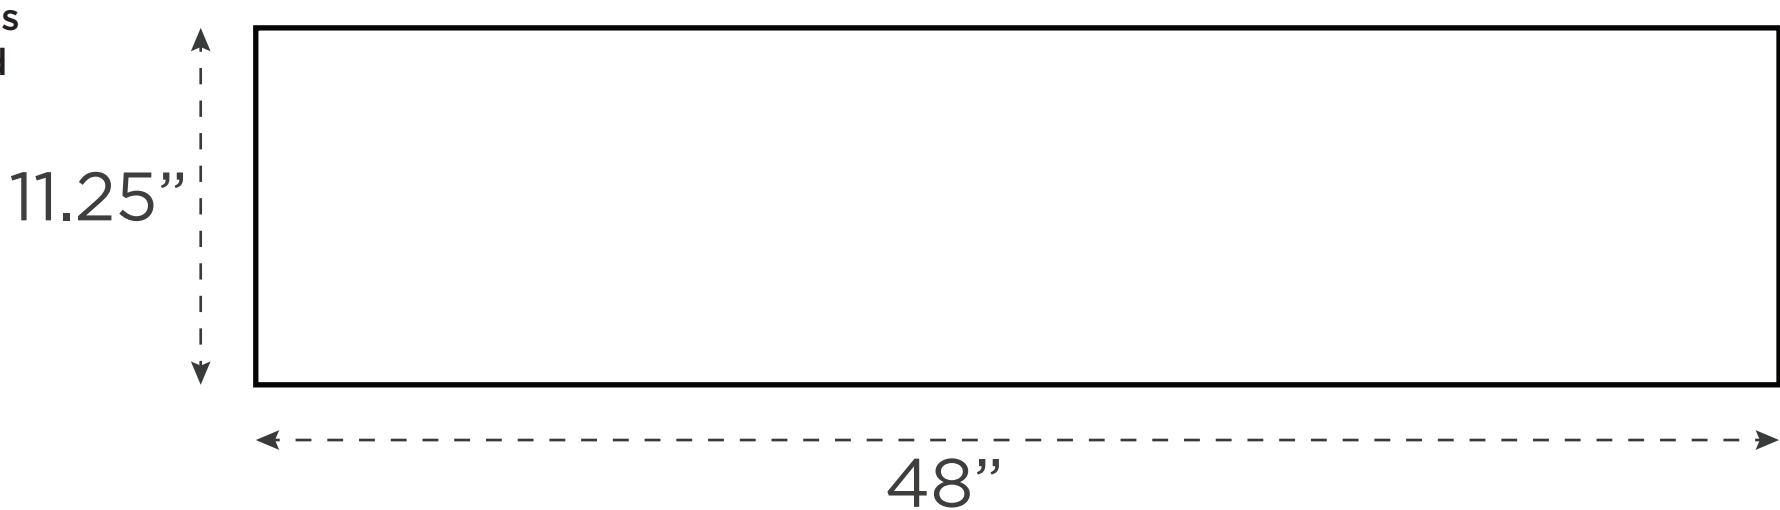


2. Cut corner to corner

I drew a line corner to corner on the pieces of 2x12 and then cut along the line with a circular saw. I did this to both pieces to make 4 triangular pieces.

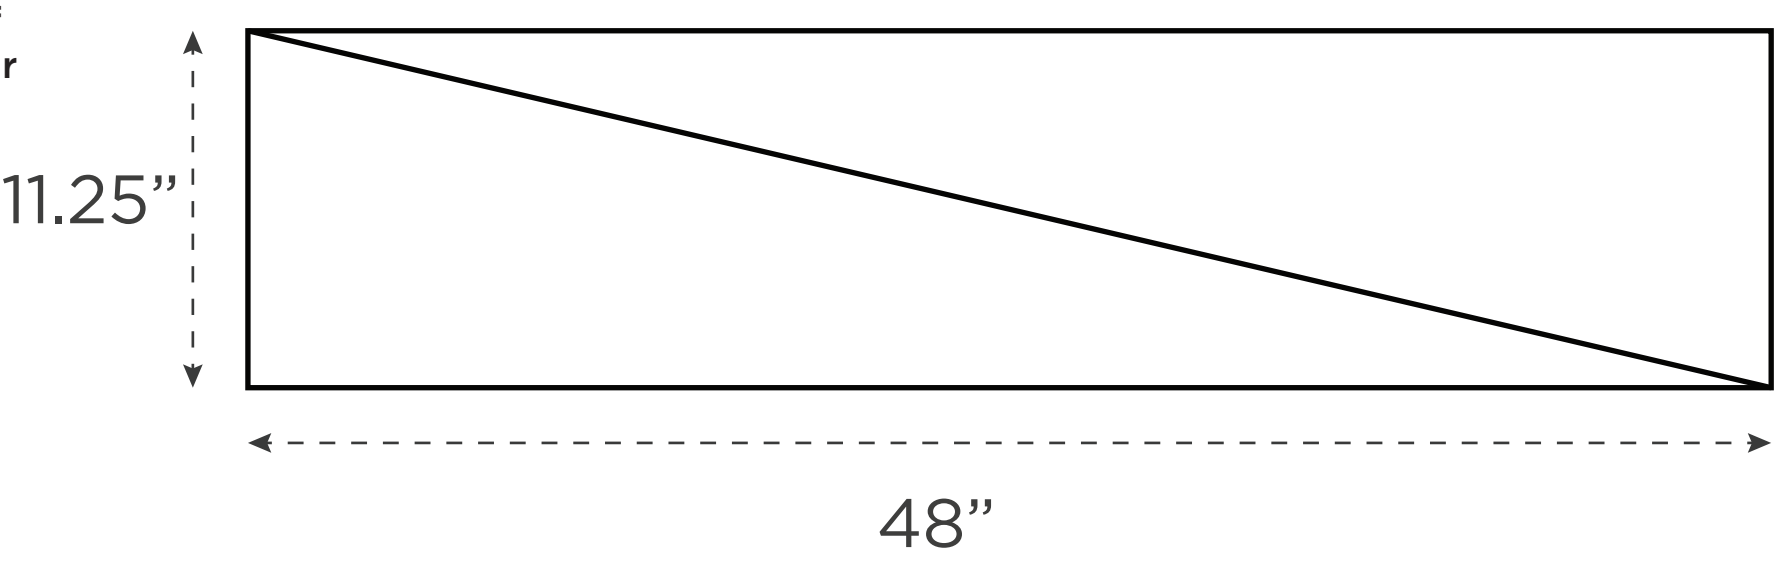


3. Trim the ends

I measured in 3 inches from the end and then drew a line to the corner. I then cut along this line with a circular saw. I did this to all four pieces.

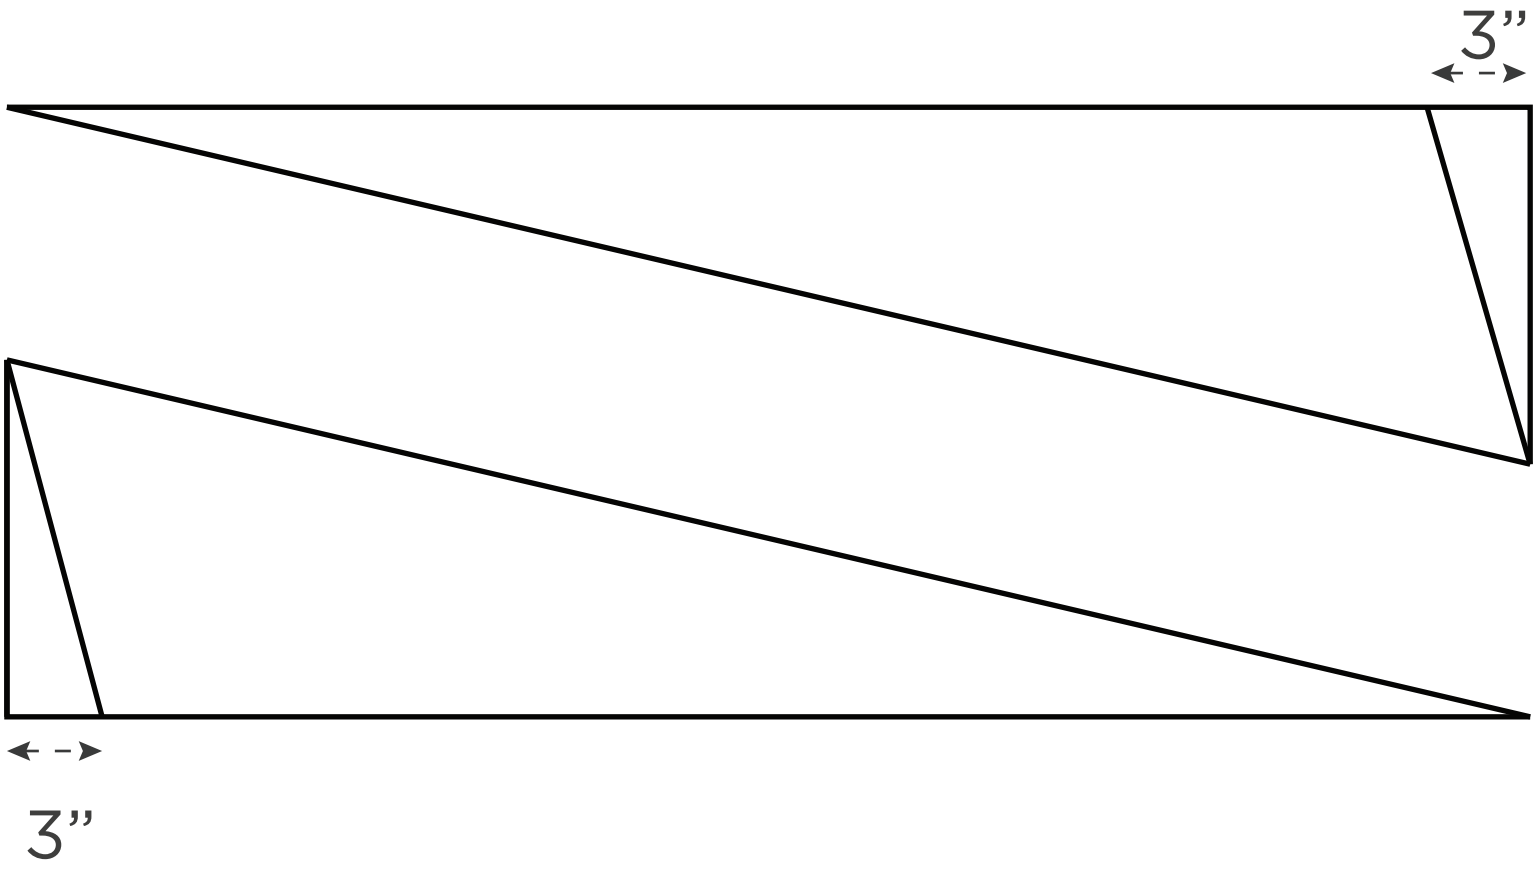


4. Trim the other ends

I measured in from the ends and then drew a line at 45 degrees with a speed square. I made two seat pieces and two back pieces.

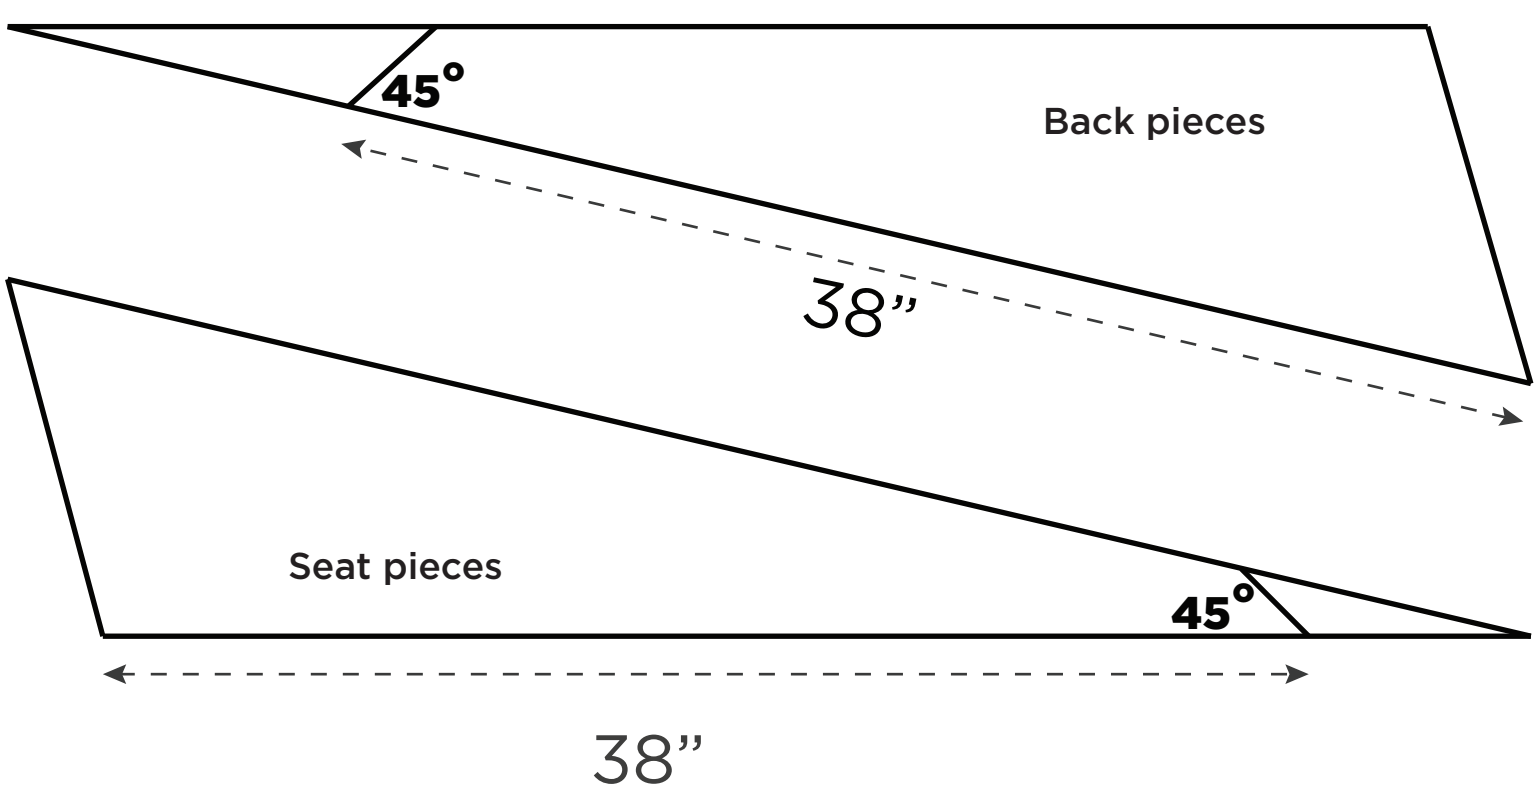


5. Screw together

I measured in 18 inches and screwed the back pieces to the seat pieces.

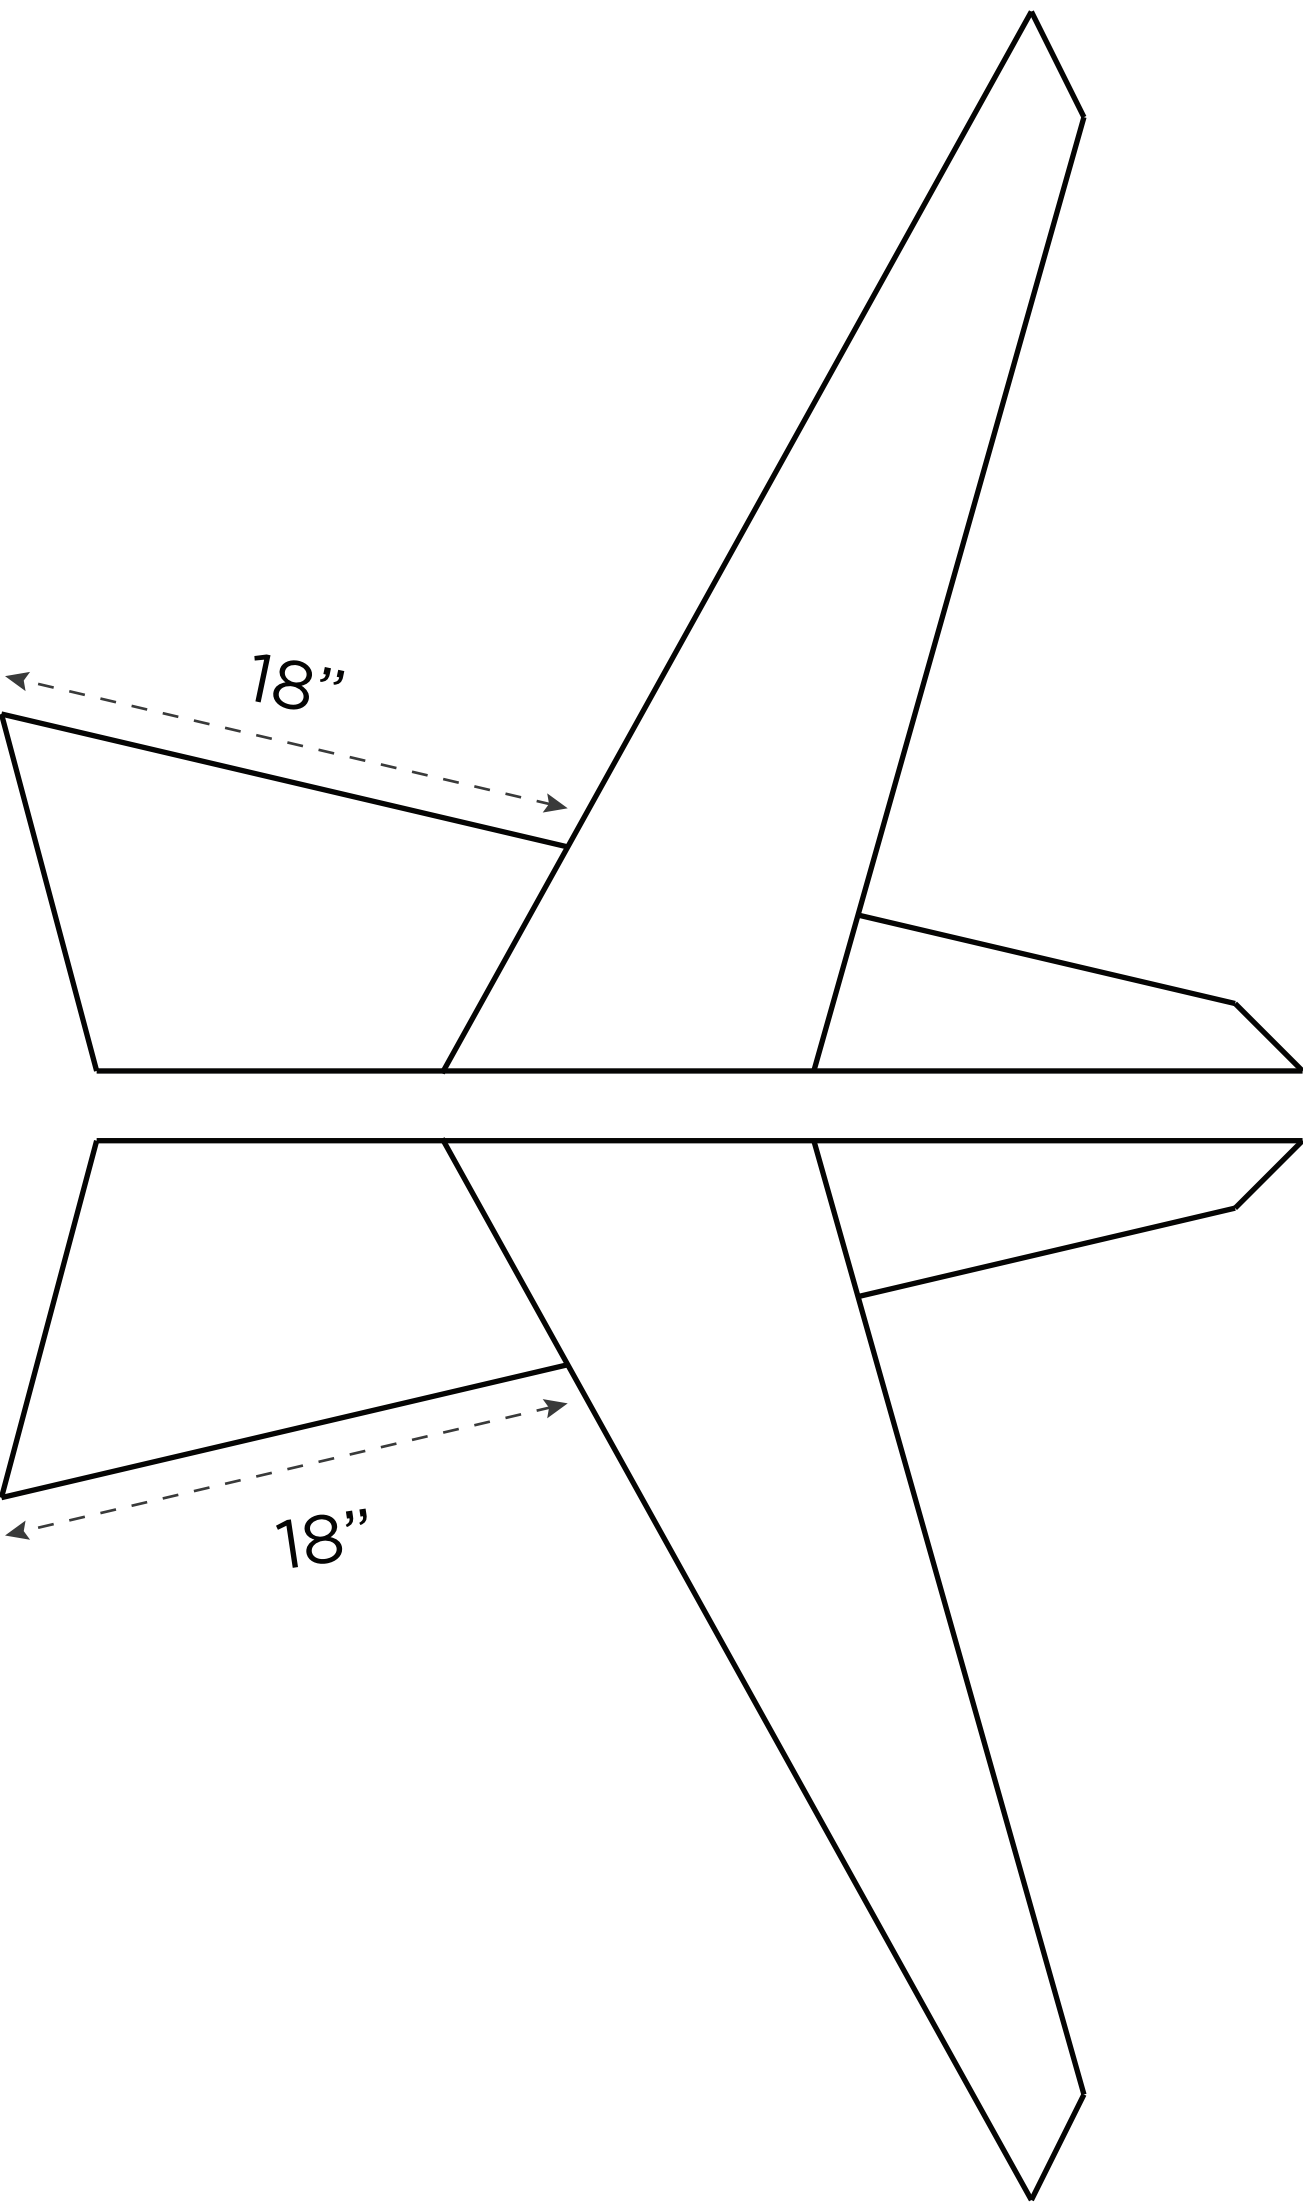

6. Add support pieces

I screwed in two 12 inch long pieces of 2x4 to the back pieces using 3 inch long deck screws.

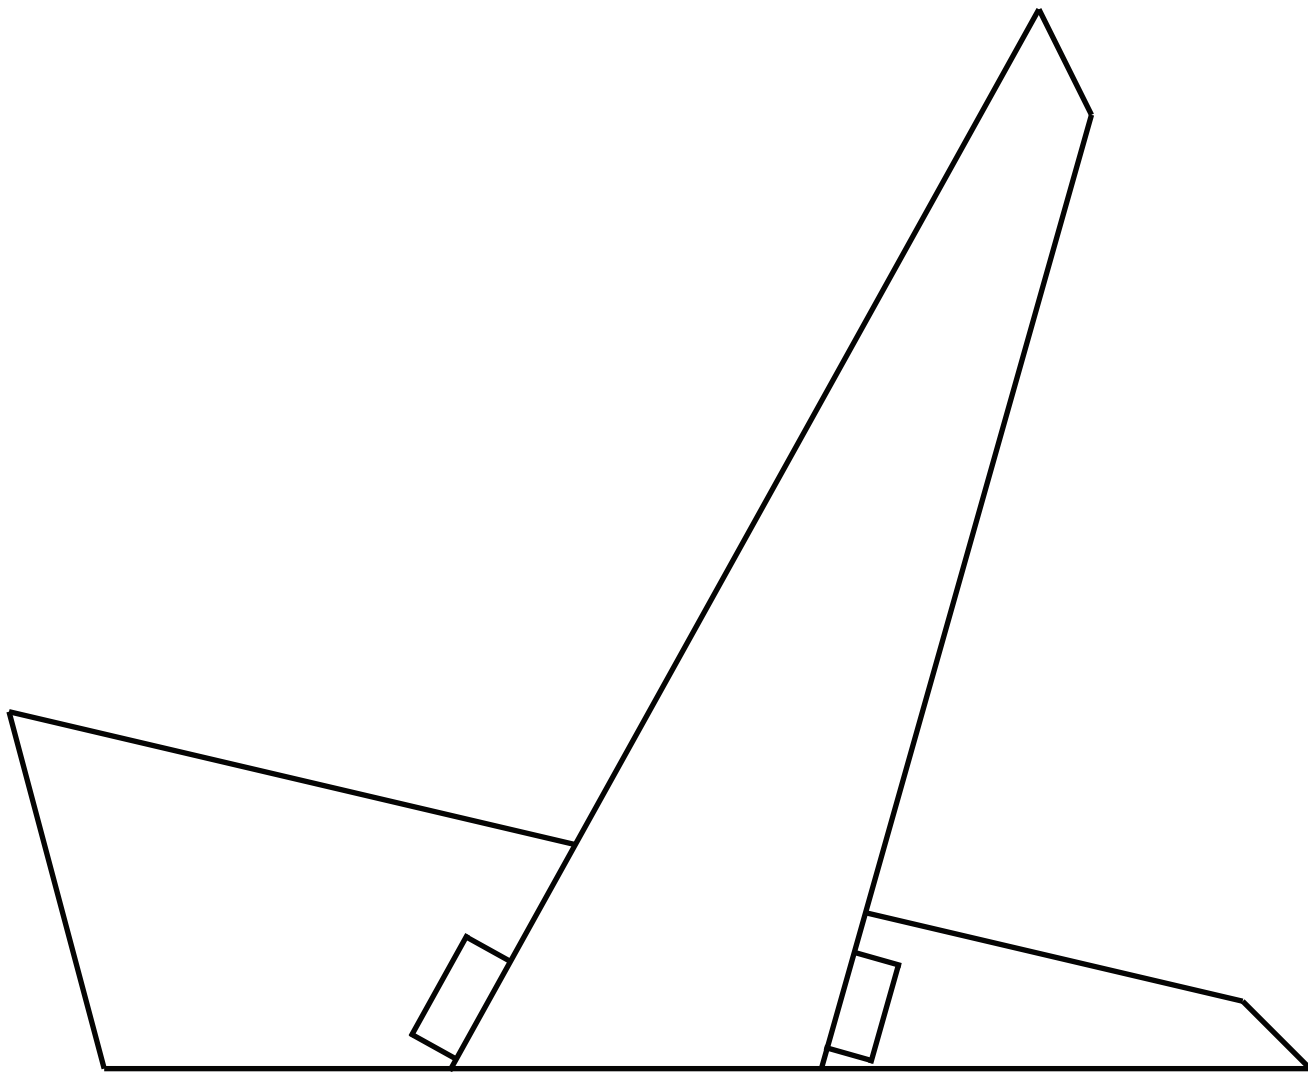

7. Screw on seat boards

I cut pieces of 2-1/2" x 3/4" pine boards long enough to overhang each side by 1/2". I then used stainless steel finish screws to fasten the boards to the frame. I predilled holes to prevent splitting.

