

HOLIDAY ORNAMENT

Add some polar fun to your holiday decorations!



MATERIALS USED:


Plywood, Clamps, Paint, Paint Brush, 1/2" Brass Cup Hook, Pencil

TOOLS USED:

Circular Saw (P507), Scroll Saw (SC165VS), Corner Cat Sander (P401), Workshop Blower (P755)

STEP 1. DOWNLOAD AND PRINT PATTERN

- Download patterns from the project page on RYOBITools.com/Nation.
- Print your selected pattern(s) on standard 8.5" x 11" paper.

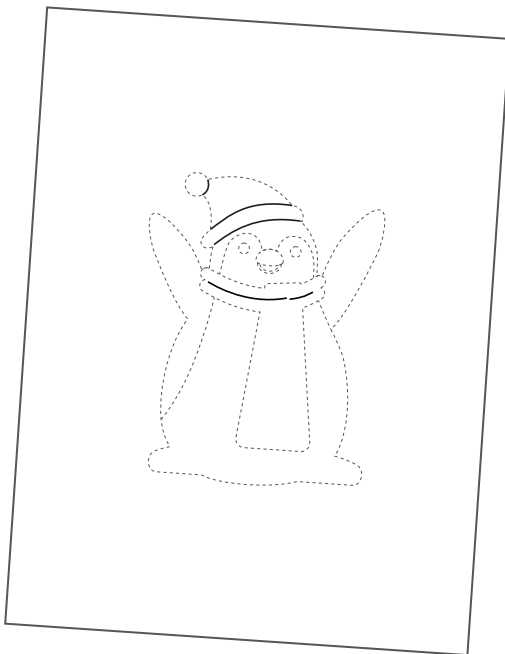

STEP 2. CUT PLYWOOD AND PAPER PATTERN


- Use a circular saw to cross cut the full sheet of plywood down to 8.5" x 11" or use a scrap piece of plywood.
- Cut out the paper pattern(s) using a pair of scissors.
- Place the cutout on the 8.5" x 11" piece of plywood and use a pencil or marker to trace the outside shape of your pattern. The inside shapes will be used as a painting guide and can be drawn later.

STEP 3. CUT THE SHAPES

Using a scroll saw, cut out the shape you traced. Start on the edge of the plywood, and cut small sections at a time. If the scrap pieces on the sides get too large, they can shake around while you're cutting and make the process unmanageable.

STEP 4. SAND AND CLEAN SHAPES

- Using a sander, sand the edges and flat surfaces of the shape. Make sure all rough or splintered areas are smoothed out.
- Using a workshop blower, clean off the shape and workspace.

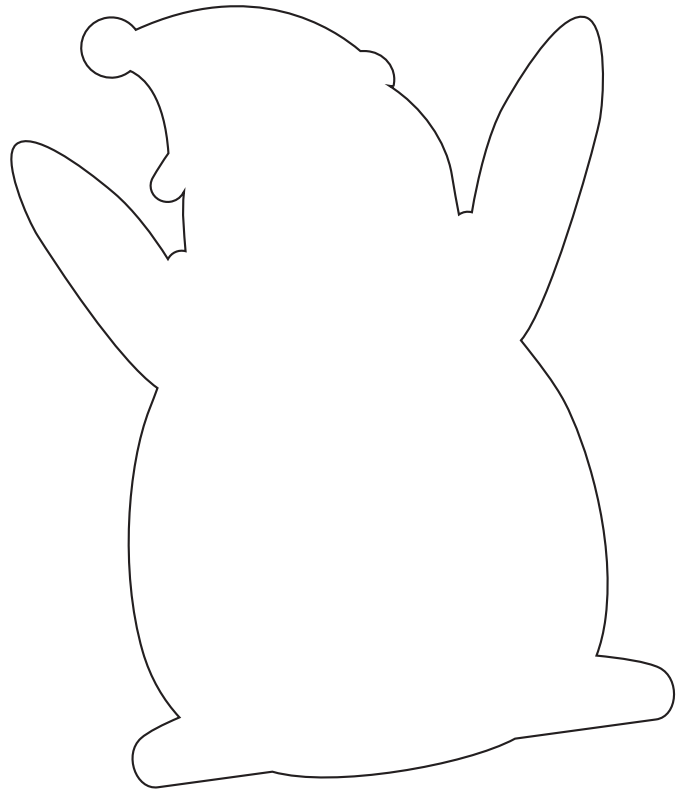

STEP 5. PAINT

Trace the inside shapes of the pattern from step 2c onto the ornament, then paint it. Wait until the paint dries before completing the next step.

STEP 6. ATTACH CUP HOOK

For the final step, screw the cup hook into the top of the ornament.

Now the project is complete!



