



MHOMEMADEMODERN

DIY BOOK SHELVES


Learn how to make a rustic modern bookshelf for your home using wood and iron.

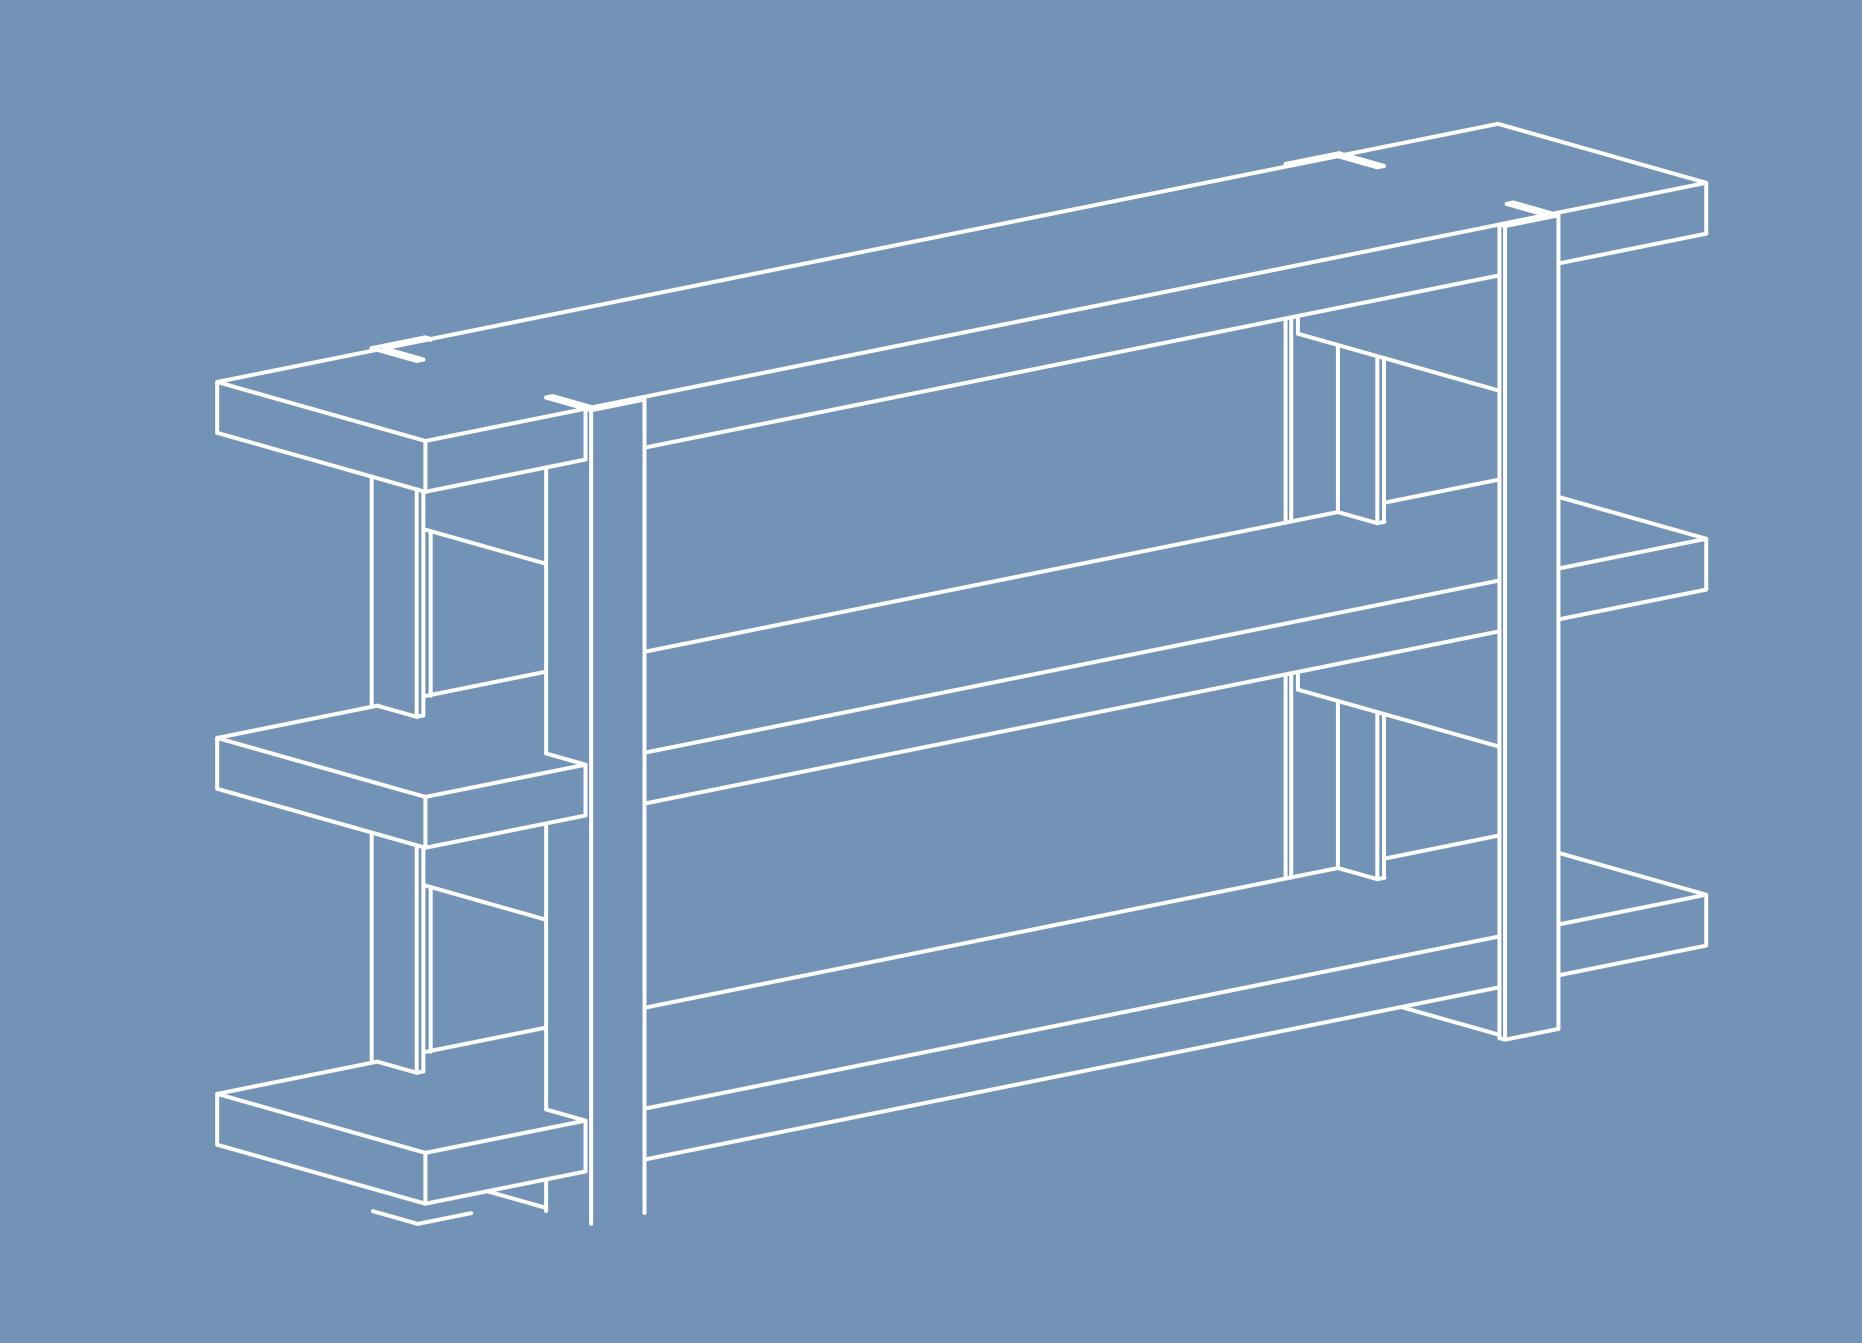

STEP 1. Cut three pieces of 2x10 48" long. Cut grooves into the sides with a jig saw that are wide enough for the flange of the angle iron to fit in. Use the grooves on the first 2x10 to mark the locations for the other two pieces of 2x10 so that all the grooves line up.

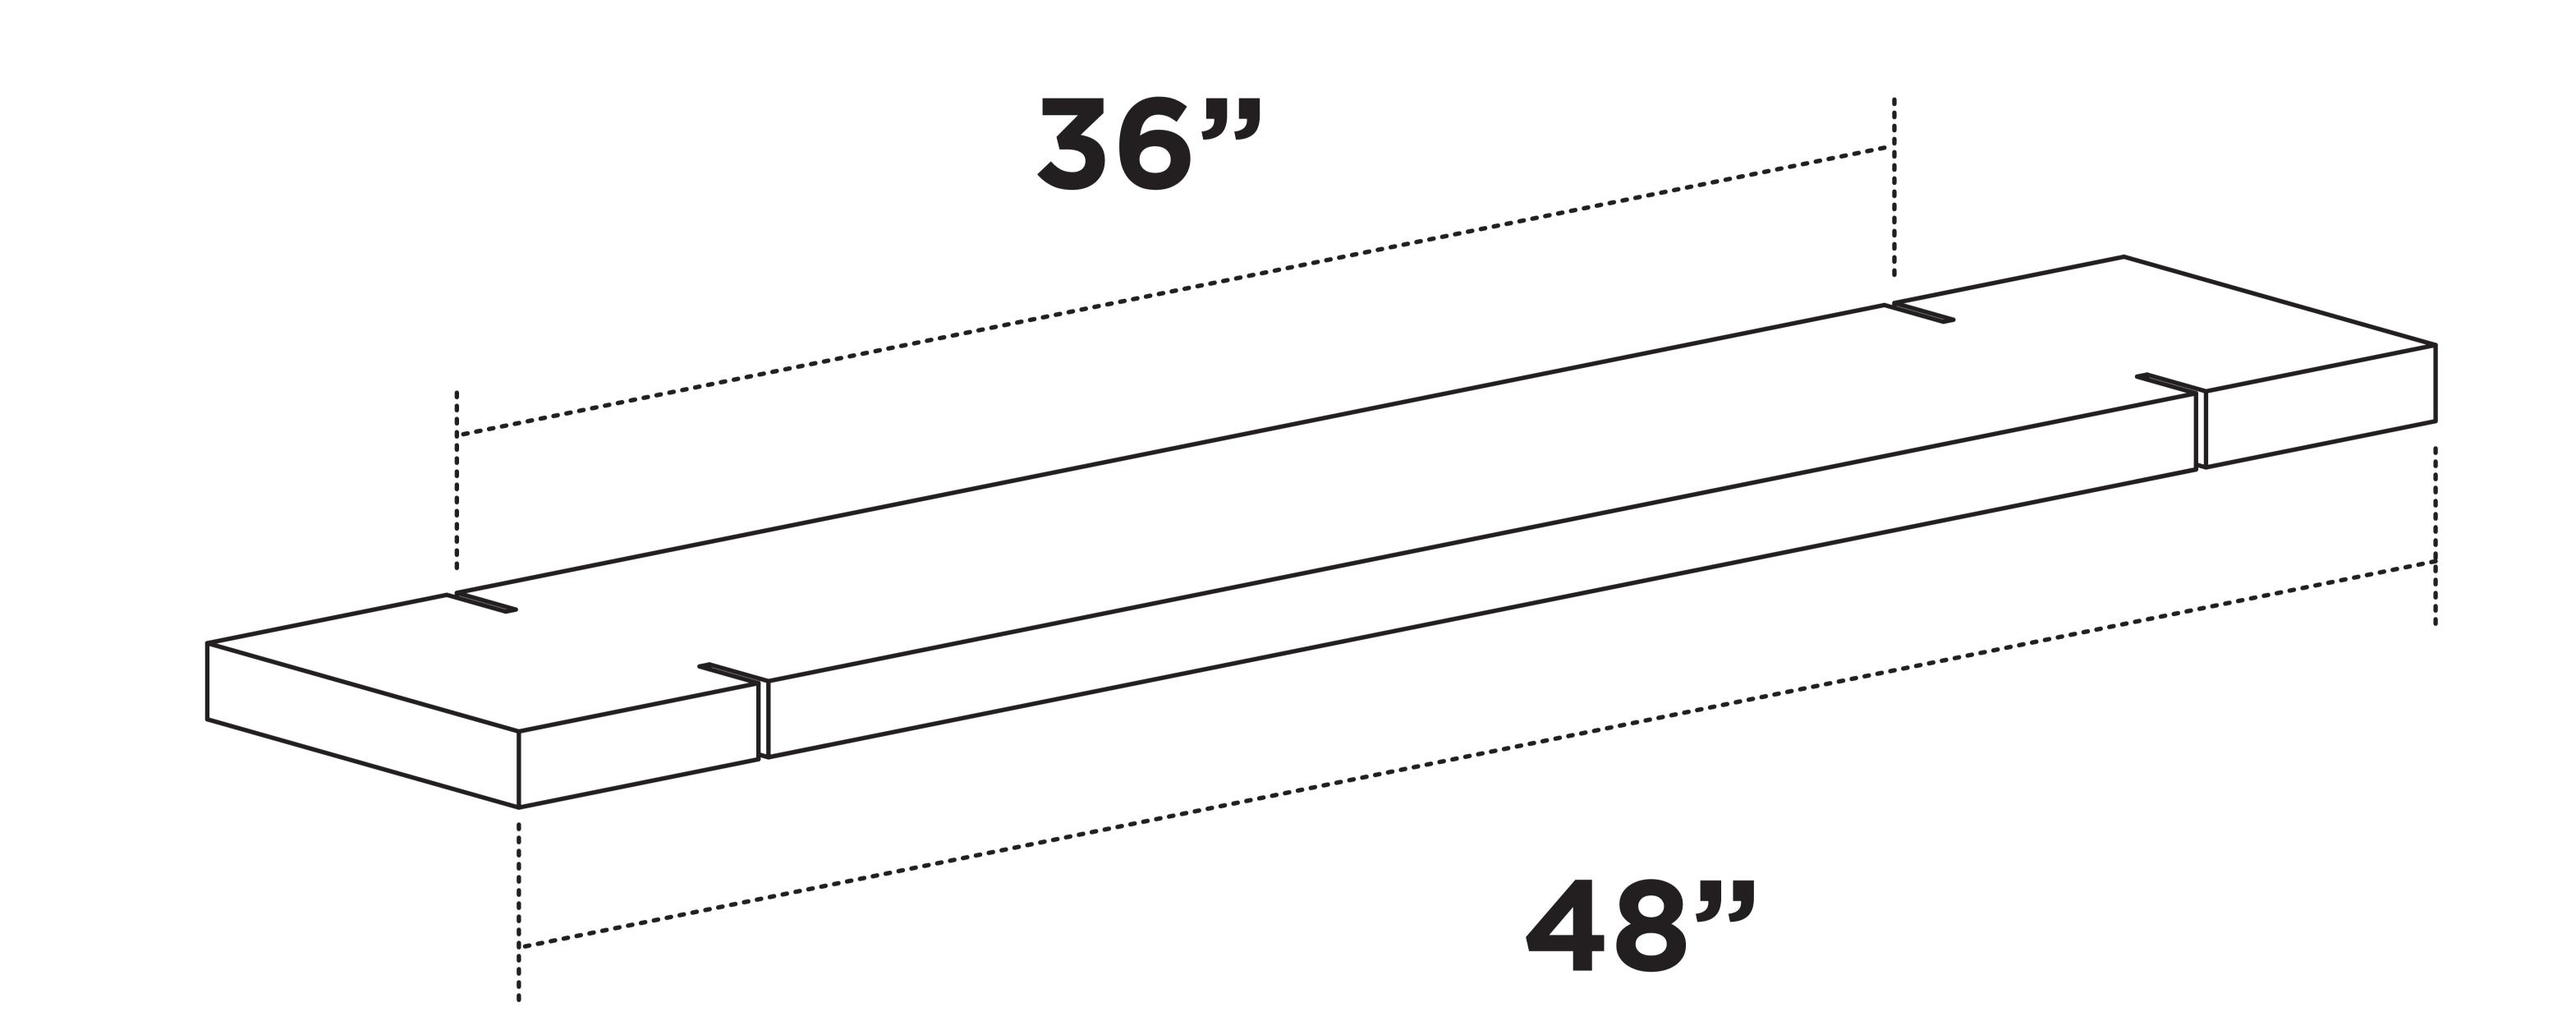

STEP 2. Screw short pieces of 2x4s and 2x2s to the underside of the 2x10s.

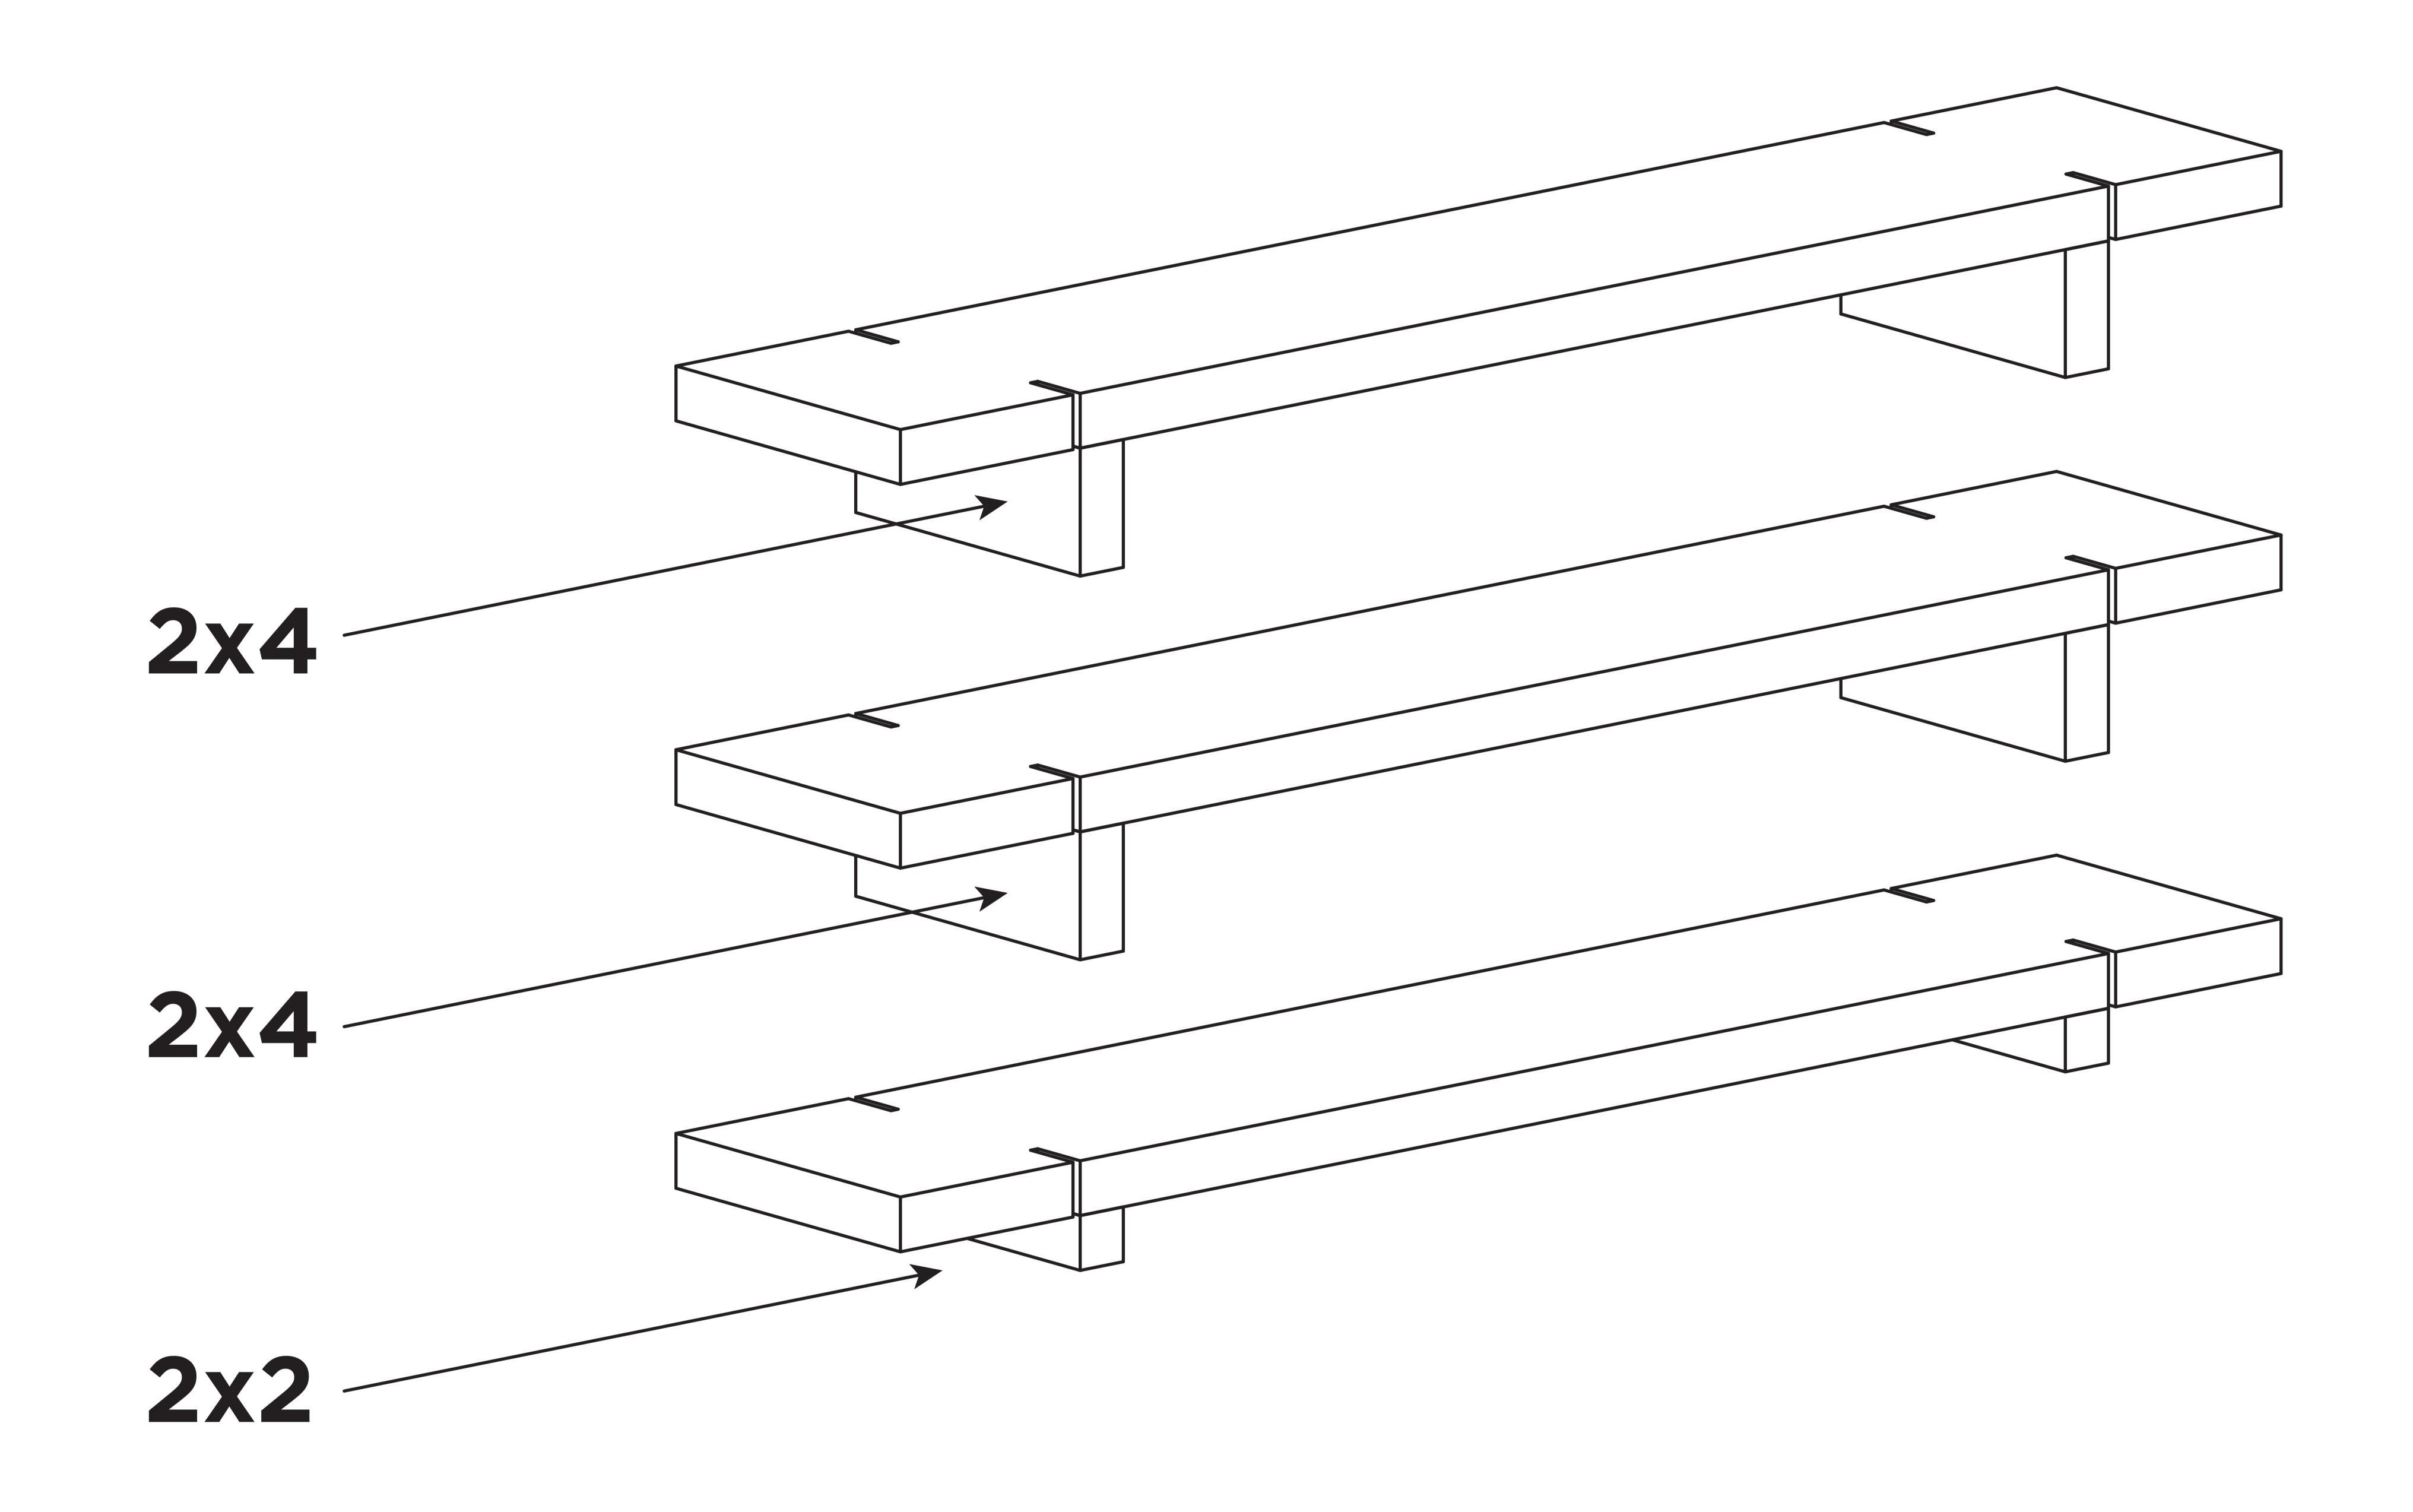

STEP 3. Cut 24" long pieces of 2"x2" angle iron with an angle grinder. Drill holes through pieces of angle iron. Clean the angle irons before sealing with paste wax. Sand the wood with an orbital sander before staining. Screw through those holes and into the wood.

